

# General Operation ( Refer to pages 14~17 of the instruction manual)

1. Pour clean Diesel into the Diesel Tank. (About 7 Liter / 1.85 Gallon)

2. Pour clean **Filtered** Water into Water Tank.  
(Approx. 20 Liter / 5.28 Gallon)

\* If used in fixed location, you can connect with direct water inlet for automatic supply. To do so, make sure to install water purifier in between.



3. In separate container, pre-mix wax with water in the ratio of **1(wax) : 7 (water)**, and pour into **Wax Tank**. (Approx. 7.5 Liter / 2 Gallon)



4. Connect Steam Hose with the machine.  
Fastening may be little stiff because of new silicone packing.

5. Attach the Steam Hose to Hose Safety Clip.  
It is an additional safety to prevent injury due to sudden disconnection of Steam Hose.



6. Connect power cord to outlet and turn the main switch ON.  
**( Do not touch with Wet Hand)**


- Watch for the power LED light is ON.
- Listen for the Fan to blow.

Fuel or Sensor Checkup	Water Shortage	Wax Shortage	Over Heat	Normal Operation
Pump Checkup	Ignition Checkup	Over Time		<b>POWER ON</b>



7. Turn the Operation Switch On.

When Operation switch is On, it will ignite burner with "I" light flashing for about 3 seconds, then 'P' light will be on.

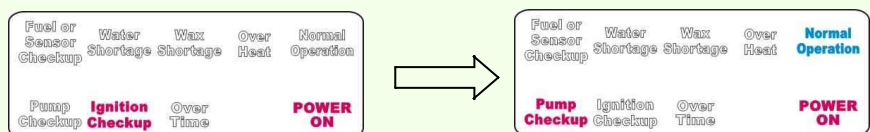

(It will automatically check and diagnose water pumps and supply lines for 5 sec..)



### 8. Turn the Wax Switch On.

When this switch is on, the Wax Pump will automatically inject exclusive coating wax into the steam and spray at the same time.

◆ Turn Wax switch Off, if you are cleaning carpets, or interior to prevent waste of wax. However, it is safe to leave it on if forgotten.

The wax is integrated into the steam within 2 minutes. prevent waste of wax. However, it is safe to leave it on if forgotten.

### How to use the double hose model,

The double hose model can wash for two cars at the same time using two hoses.

The use of stable steam is possible after the machine has been heated for 5 minutes at least.

If you want to use just 1 steam hose to cleaning for exterior of car, close the left valve of steam outlet on the machine.



The hose connector (steam outlet) for using lower humidity steam.



### How to use lower humidity steam,

If you want to use lower humidity of steam, you need to use the left hose which connected with the left side valve of steam outlet.

But you have to use two hoses at the same time if you want to use lower humidity steam.

It means that you must to be pulled (opened) the trigger of steam gun like below picture so that the steam can drain continues by the steam gun when you want to use lower humidity of steam even if you do not use the right side steam hose (please refer to the picture).

